


Harlequin's Professional Freestanding Ballet Barre **Assembly Instructions**

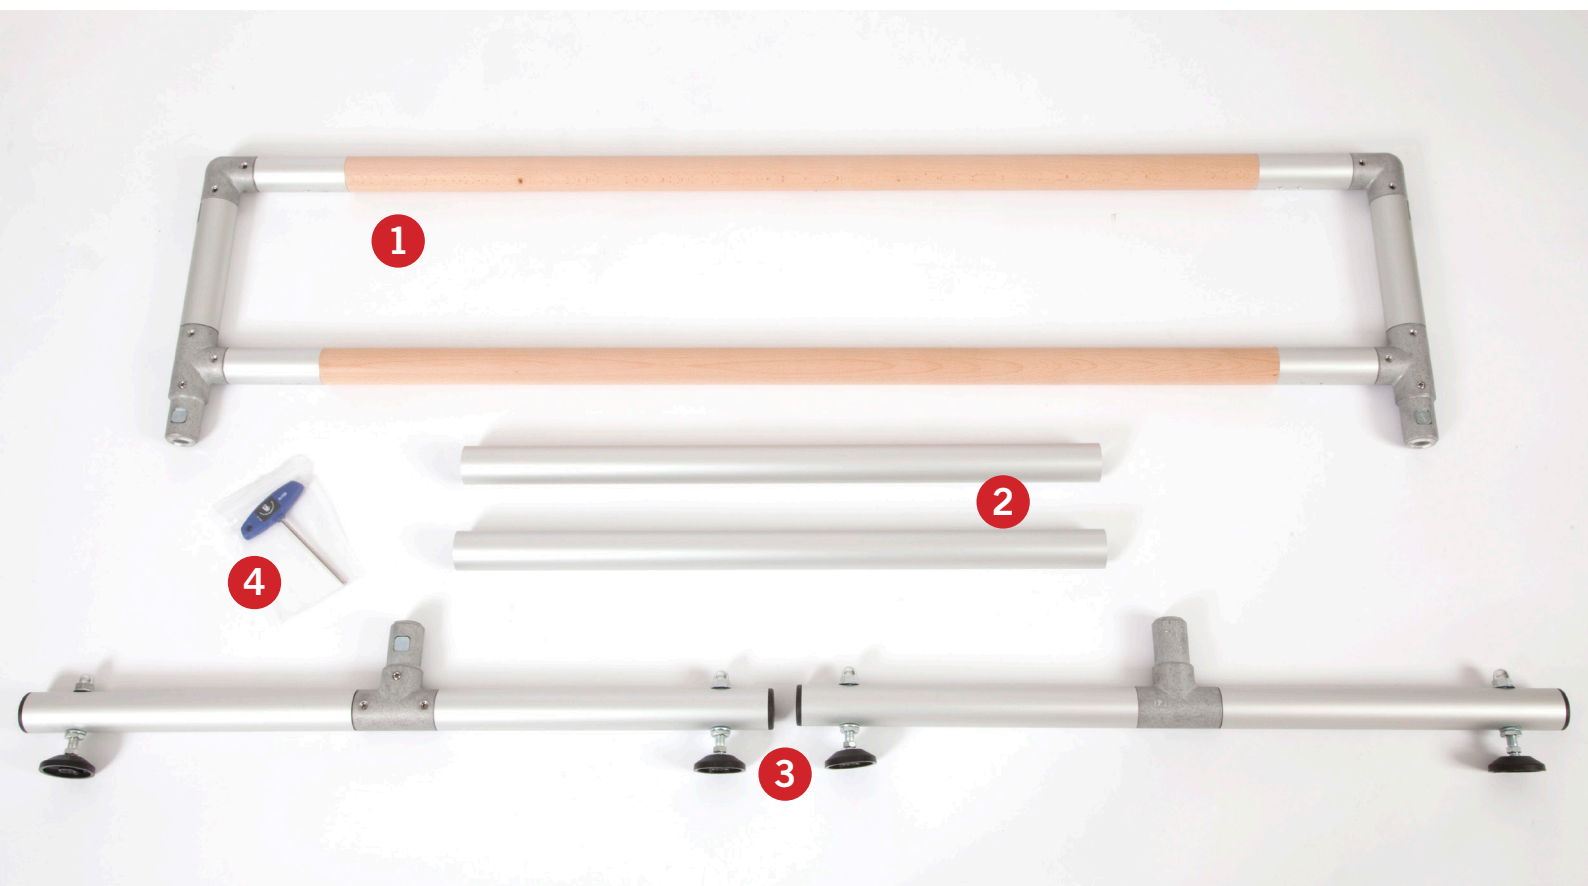

Your Harlequin Professional Freestanding Ballet Barre will arrive in five sections:

- ① 1 x top section with two beach or aluminium bars
- ② 2 x upright sections
- ③ 2 x foot sections
- ④ 1 x Allen key



1. Insert an upright section into a foot section and repeat inserting the opposite upright section into the opposite foot section.



2. Tighten the hex screws with the Allen/hex key provided.



3. Insert the connected upright and foot sections into each end of the top section.



4. Tighten the hex screws with the Allen/hex key provided.

N.B The feet on the foot sections are adjustable for stability on an uneven floor. Adjust with a spanner as required (spanner not included).



British Harlequin plc
Festival House, Chapman Way
Tunbridge Wells, Kent TN2 3EF

Tel: +44 (0)1892 514888
Fax: +44 (0)1892 514222
Freephone: 0800 28 99 32

www.harlequinfloors.com
enquiries@harlequinfloors.com

LONDON
LUXEMBOURG
BERLIN
PARIS
MADRID
LOS ANGELES
PHILADELPHIA
FORT WORTH
SYDNEY
HONG KONG

HARLEQUIN
The world dances on Harlequin floors®

